 
 


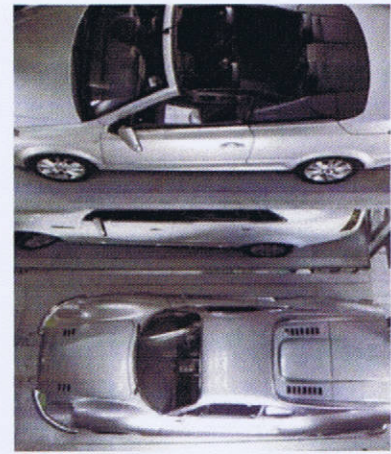

Klaus Multiparking Australia | 648 Glenhuntly Road Caulfield South VIC 3162
Phone: +61 3 9524 6600 | www.multiparking.com.au | info@multiparking.com.au

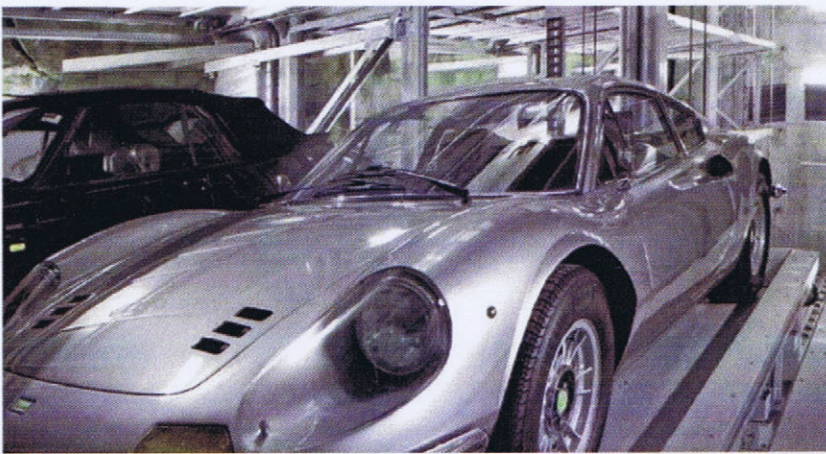

Aspire Apartments
11 Alberta Street
Sydney NSW, 2000

Automatic Car Parking System User Instructions

General Information

- Only registered vehicles & named users may operate this system. You must have completed an induction prior to use.
- Only your registered vehicle can be stored in this system. Do not attempt to store trailers, motorbikes, boxes or other goods. Goods may only be stored in designated storage cages.
- Park & Exit in the forward direction only. **Never** attempt to reverse your vehicle back out of the entry roller-door.
- **Never** increase your vehicle height once it is inside the cabin (e.g. by attaching roof racks)
- Do not use the entry/exit roller-doors for pedestrian access. Pedestrian access is only available via the Cabin side-door.
- While a park/exit is in progress, other users may be waiting. Do not spend longer than necessary in the Cabin.
- There are 2 storage cages that will be accessed using dedicated RFID tags in the same way that cars will be parked and retrieved.

Traffic Lights

Coloured Traffic Lights at the entrance roller door indicate the state of the system:

GREEN – You may drive into the Cabin via the Entry roller-door

RED - System in Use. Swipe your tag to enter the Queue.

AMBER - System in motion. Swipe your tag to enter the Queue

RED (FLASH) – System Malfunction. Contact Service Representative. Parking not Possible.

Tag Readers

- Only the Tag Reader at the Entry roller-door can be used to initiate vehicle entry.
- Tag readers at the Cabin side-door, and in the Lifts may only be used to initiate vehicle exit.
- If you are placed in the queue, you may cancel your request by scanning your tag again, and accepting the prompt (entry requests must be cancelled at the entry door reader)

Always follow the prompts shown on the tag reader screens. To complete a park procedure, you must accept prompts at the Cabin side-door screen.

Fault Behaviour

If the system is operating abnormally, or you are unable to complete your park/exit, contact your building concierge, or Klaus Service representative (phone numbers are provided on the last page). Do not leave the system unattended if your park/exit fails to complete.

 
 


In an emergency situation, always call 000

Parking Your Vehicle

1. Swipe your tag at the reader by the Entry roller-door to start parking

- If the system is not in use, the Entry roller-door will open immediately. If the system is busy, you will be placed in a queue.
- A prompt on the reader screen will confirm your request.

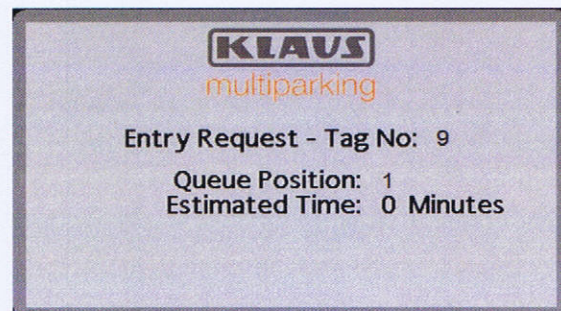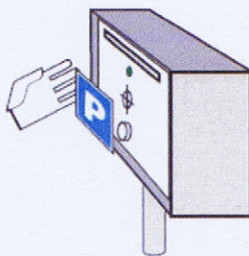

2. Wait for the roller-door to open completely, then drive into the Cabin

- Park within the pallet wheel-wells.
- The Large Message Display will indicate when your vehicle is parked in the correct position.



Do not drive into the Cabin if your tag number is not the one shown on the Large Message Display

3. Park your vehicle, turn it off, exit your vehicle and proceed to the Side-Door screen

- Switch Off Ignition, Transmission in 'P', Radio aerial down
- Parking Brake ON



Materials left in the Cabin may obstruct sensors, and cause the system to malfunction. Do not leave any foreign objects in the Cabin



4. Follow the Safety prompts at the Side-door screen

- All Entry/Exit doors must be closed and locked before the system will move
- You must swipe your tag to confirm parking at the last safety prompt
- If there is a problem with your vehicle dimensions, or motion is detected in the Cabin, you will be prompted to re-enter, and check the Cabin

 
 


Wait for your vehicle to start lowering into the car-park before walking away from the system

Retrieving Your Vehicle

1. Swipe your tag at the reader by the side door or in the lifts to start an exit procedure

- If the system is not in use, your vehicle retrieval will start immediately. If the system is busy, you will be placed in a queue
- There is reader in each lift that will accept a command to retrieve a vehicle, as well as one in the pedestrian corridor adjacent the Entrance Cabin.
- A prompt on the reader screen will confirm your request.

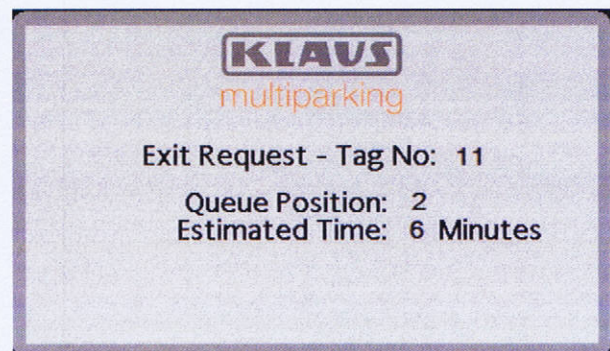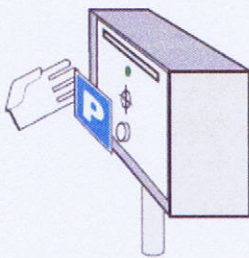

2. When your vehicle is ready, the Cabin side-door will unlock, and the screen will prompt you to enter

- Enter the cabin immediately, and leave in the forward direction, via the exit roller-door
- The roller door will open as soon as you enter the cabin
- The roller door will close automatically behind you



Materials left in the cabin may obstruct sensors, and cause the system to malfunction. Do not leave any foreign objects in the Cabin

3. To return your vehicle to storage, proceed to the side-door screen (e.g. if you needed to get something out of your vehicle)

- Do not cross the light-barriers at the exit roller-door
- Swipe your tag at the side-door reader
- You must accept the safety prompts again to re-store your vehicle

4. Storage cages have been pre-allocated to apartments as per Clause 23 of the Aspire by-laws. To gain access to your storage cage, if allocated, use your dedicated RFID tag to retrieve it in the same way in Point 1 and 2 above. To return the storage cage to storage, follow Point 3 above.

Induction Record

| Maximum Dimension & Weights | |
|-----------------------------|--------|
| Max Vehicle Length | 5200mm |
| Max Vehicle Height | 1900mm |
| Max Vehicle Width | 2150mm |
| Max Vehicle Weight | 2500kg |
| Max Wheel Load | 625kg |

| Permitted Vehicles | | | | |
|--------------------|------------|------|----------------|--------------|
| RFID TAG | Owner Name | Apt. | Contact Number | Registration |
| | | | | |
| | | | | |

I hereby confirm that I have been fully instructed in accordance with the pertinent regulations as to the safe operation of the automatic parker, and that I have read and understood these operating instructions.

| Permitted Users | | | |
|-----------------|--------------|-----------|------|
| No. | Name (Print) | Signature | Date |
| 1 | | | |
| 2 | | | |

| Service Contacts | |
|---------------------------------|--------------|
| Aspire Concierge | TBC |
| Klaus Multiparking Australia | 03 9524 6600 |
| Klaus Multiparking 24/7 service | 0428 130 686 |
| Vision Building Management | 0449 044 913 |

A copy of this record MUST be provided to Vision Building Management on completion of induction