

KLAUS MASTERVARIO 32



Automatic Car Parking System User Instructions

Aspire Apartments
13-15 Alberta Street
Surry Hills NSW, 2010

General Information

- Only registered vehicles & named users may operate this system. You must have completed an induction prior to use.
- Only your registered vehicle can be stored in this system. Do not attempt to store trailers, motorbikes, boxes or other goods. Goods may only be stored in designated storage cages.
- Park & Exit in the forward direction only. **Never** attempt to reverse your vehicle back out of the entry roller-door.
- **Never** increase your vehicle height once it is inside the cabin (e.g. by attaching roof racks)
- Do not use the entry/exit roller-doors for pedestrian access. Pedestrian access is only available via the Cabin side-door.
- While a park/exit is in progress, other users may be waiting. Do not spend longer than necessary in the Cabin.
- Do not linger inside the cabin when exiting in your car. Drive out promptly allowing the roller door to close behind you.

Traffic Lights

Coloured Traffic Lights at the entrance roller door indicate the state of the system:

GREEN – You may drive into the Cabin via the Entry roller-door

RED - System in Use. Swipe your tag to enter the Queue.

AMBER - System in motion. Swipe your tag to enter the Queue

RED (FLASH) – System Malfunction. Contact Service Representative. Parking not Possible.

Tag Readers

- Only the Tag Reader at the Entry roller-door can be used to initiate vehicle entry.
- Tag readers at the Cabin side-door, and in the Lifts may only be used to initiate vehicle exit.
- If you are placed in the queue, you may cancel your request by scanning your tag again, and accepting the prompt (entry requests must be cancelled at the entry door reader)

Always follow the prompts shown on the tag reader screens. To complete a park procedure, you must accept prompts at the Cabin side-door screen.

Fault Behaviour

If the system is operating abnormally, or you are unable to complete your park/exit, contact your building concierge, or Service representative (phone numbers are provided on the last page). Do not leave the system unattended if your park/exit fails to complete.




In an emergency situation, always call 000

If there is an imminent threat of injury or death press the nearest EMERGENCY STOP push button and then inform your service representative and the Building Manager. This will stop all movement of the system

Parking Your Vehicle

1. Swipe your tag at the reader by the Entry roller-door to start parking
 - If the system is not in use, the Entry roller-door will open immediately. If the system is busy, you will be placed in a queue. Wait in your vehicle.
 - A prompt on the reader screen will confirm your request.

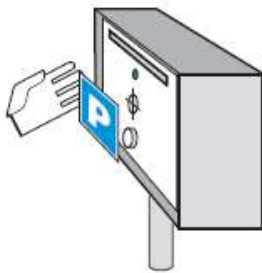

2. Wait for the roller-door to open completely, then drive slowly into the Cabin
 - Park within the pallet wheel-wells.
 - The Large Message Display will indicate when your vehicle is parked in the correct position. If not, correct vehicle position according to display instructions, until the display says so.



Do not drive into the Cabin if your tag number is not the one shown on the Large Message Display

3. Park your vehicle, turn it off as shown below and proceed to the Side-Door screen

- Switch Off Ignition, put transmission in 'P', Radio aerial down
- Parking Brake ON, close all car doors and boot properly.



Materials left in the Cabin may obstruct sensors, and cause the system to malfunction. Do not leave any foreign objects in the Cabin




4. Follow the Safety prompts at the Side-door screen and press green button
 - All Entry/Exit doors must be closed before the system will move
 - Then swipe your tag to confirm parking as the last safety prompt; this also closes entry door

- If there is a problem with your vehicle dimensions, or motion is detected in the Cabin, you will be prompted to re-enter, and check the Cabin or repark the car.
- Wait for your vehicle to start lowering into the car-park before walking away from the system.

Retrieving Your Vehicle

1. Swipe your tag at the reader by the side door or in lifts to start exit procedure
 - If the system is not in use, your vehicle retrieval will start immediately. If the system is busy, your tag will be placed in a queue
 - A prompt on the reader screen will confirm your request.

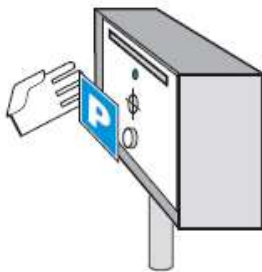

2. When your vehicle has come up and is ready, the Cabin sliding-door will unlock and the screen will prompt you to enter
 - Enter the cabin immediately and start your car and leave in the forward direction, via the exit roller-door. Do not stop before or under the exit roller door.
 - The exit roller door will open as soon as you enter the cabin
 - The exit roller door will close automatically behind you as you drive out.



Materials left in the cabin may obstruct sensors, and cause the system to malfunction. Do not leave any foreign objects in the Cabin

3. To return your vehicle to storage, proceed to the side-door screen (e.g. if you needed to get something out of your vehicle)
 - Do not cross the light-barriers at the exit roller-door
 - Swipe your tag at the side-door reader
 - You must accept the safety prompts again to re-park your vehicle.

Induction Record

Maximum allowable Dimensions & Weight	
Max Vehicle Length	5200mm
Max Vehicle Height	1900mm
Max Vehicle Width	2150mm
Max Vehicle Weight (loaded)	2500kg
Max Wheel Load	625kg

Permitted Vehicles				
RFID TAG	Owner Name	Apt.	Contact Number	Registration

I hereby confirm that I have been fully instructed in accordance with the pertinent regulations as to the safe operation of the Automatic Parking System and that I have read and understood these operating instructions. I also acknowledge that my vehicle conforms to the allowable dimensions and weight stated above.

Permitted Users			
No.	Name (Print)	Signature	Date
1			
2			

Service Contacts	
Aspire Building Manager	0400545517
Optipark Australia PL	02 94169575